



## FILLING INSTRUCTIONS FOR ULTIMATE SERIES LUBERS

### Primary Filling Instructions

A standard grease gun (either manual, air or electrically operated) can be used to fill the unit.

1. Push the grease gun "zirk chuck" onto the zirk fitting of the unit.
2. Start filling the unit.
3. Pull open the relief valve and hold open. (opposite the zirk)
4. Continue filling the unit until air pockets are minimal. (May vary depending on viscosity of lubricant).
5. Release the relief valve, then continue filling until marks on label line up with the piston O-Rings.
6. DO NOT OVERFILL. If overfilled, possible damage to the unit can occur.

### Refilling Instructions

1. Push the grease gun "zirk chuck" onto the zirk fitting of the unit.
2. Fill unit until marks on label line up with the piston O-Rings.
3. DO NOT OVERFILL. If overfilled, possible damage to the unit can occur.